

HRFER

Contour™ Barrier-Free Cooler

WALL OPENING

IMPORTANT: It is necessary to create a wall opening 18 3/4" W x 37 3/4" H and 4 1/2" above the floor line.

MOUNTING INSTRUCTIONS

Refer to rough-in for location of plumbing and electrical sources. The support frame is to be installed first. The shelf for the water chiller should be assembled to the wall frame, and then place chiller into position. Hang upper fountain panel to hanger on frame. Fountain is to be attached to panel and wall frame. Water service line, waste line and electrical is assembled as required. The bottom panel is attached last, after a final check for leaks and correct functions of fountains and chiller. (For details see the installation instructions.)


OPERATING PRESSURES:

Supply water - 105 psi maximum


ELECTRICAL DATA

Junction box for a (3) wire 10 AMP branch circuit. Standard 120 volt, 60 HZ, single phase.

FRONT VIEW

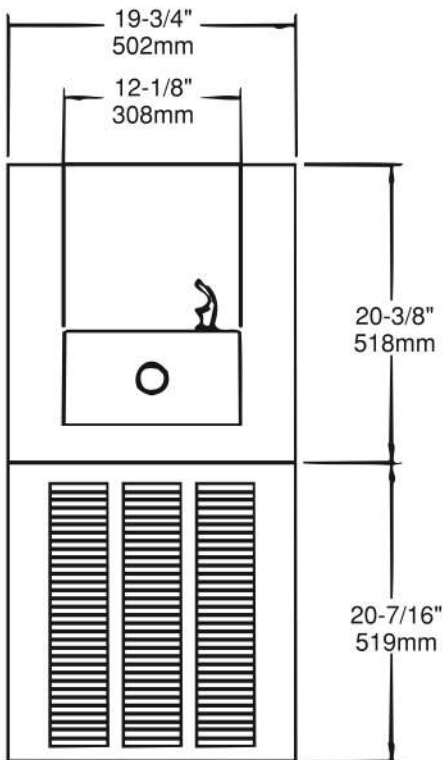

TOP & SIDE VIEW

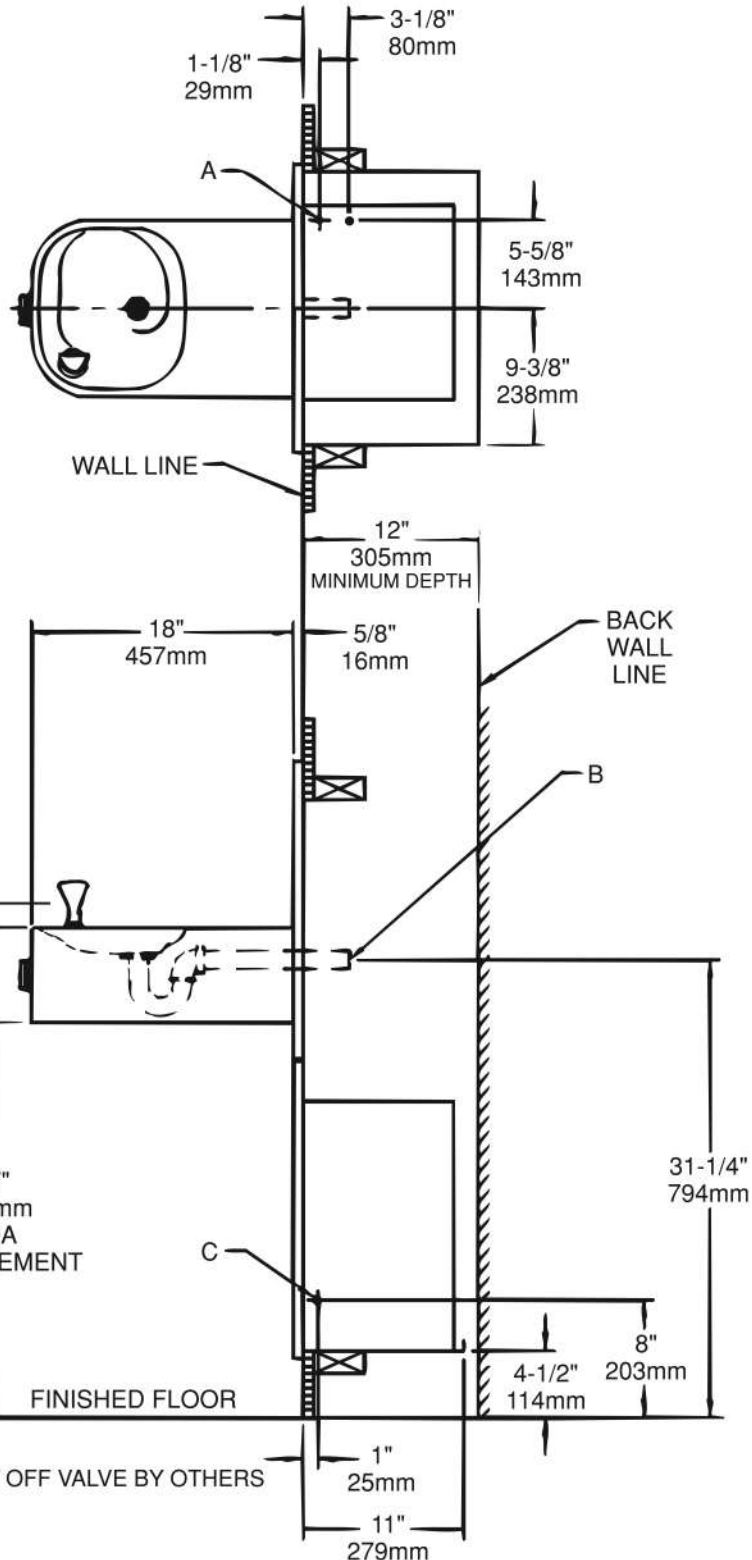

LEGEND:

A = 3/8" O.D. TUBE CONNECT (CHILLER WATER INLET) SHUT OFF VALVE BY OTHERS

B = 1-1/4" TRAP FURNISHED

C = ELECTRICAL INLET

Halsey Taylor®