


## INSTALLATION INSTRUCTIONS

### Parts Included:

- 2 Curtain Frame Sections • 3 Ceiling Tees • 3 Ceiling Supports 36" Long •
- 3 Flanges • 4 Wood Screws • 10 Set Screws w/ Heads •

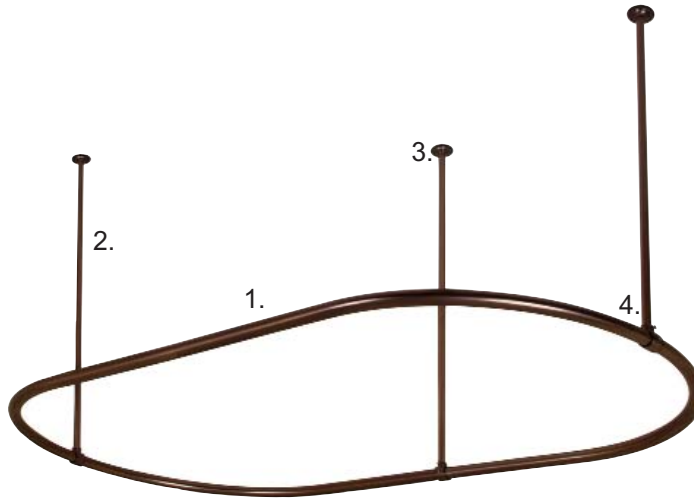

1. Connect sections of the curtain frame (1) using the ceiling tees (4) as shown above. In order to insure a solid fit, the tees fit snugly over the frame tube. Install 4 set screws in each tee.
2. Remove ceiling supports (2) and flanges (3) from the carton. Determine the correct length of the support rods as follows:
  - A. Measure the distance from the center of the ceiling tee to the ceiling. **Important:** From this measurement deduct one 1/2". This will give you the length of the ceiling support rod needed. If the ceiling support rod must be shortened, cut the non-threaded end of the rod to the length desired by using a hacksaw. Attach the flange with a set screw to the non-threaded end and then attach the ceiling support rod to the ceiling tee (4).
3. The ceiling flange should now be touching the ceiling. Mark the location of the holes of the ceiling flange on the ceiling with a pencil. Drill holes where marked on the ceiling. Remove the ceiling flange from the ceiling support rod (23). Install the ceiling flange using the wood screws. If necessary use plastic expansion plugs (not provided). It is important that the ceiling flange be mounted as securely as possible.
4. Insert ceiling support rod into flange then tighten the set screws securely.