
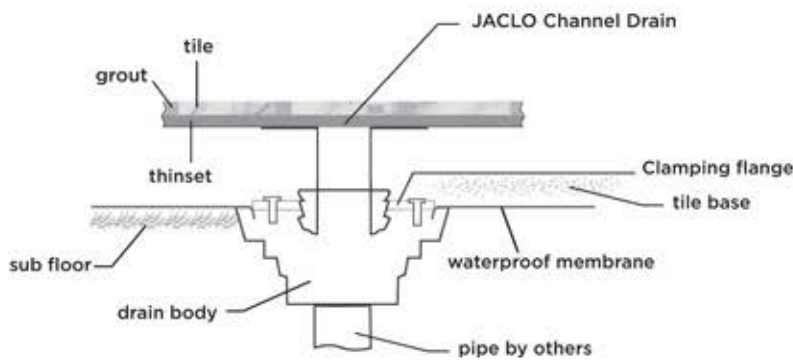


INSTALLATION INSTRUCTIONS WITH SUB DRAINS

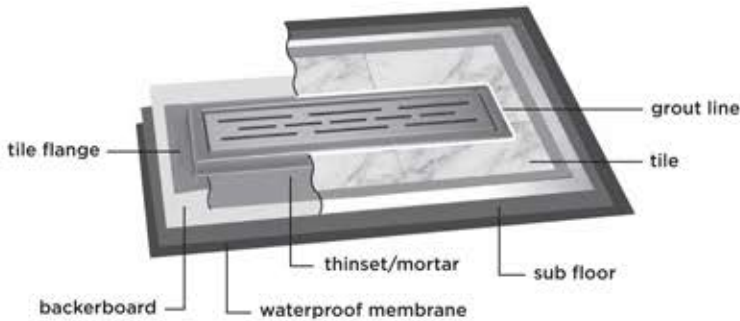

- Determine installed location of channel drain, piping and sub drain.
- Install sub drain body with suitable support and connect outlet to pipe work
- Install subfloor. There are many options at this juncture, follow local codes and subfloor manufacturers recommendations. Allow for correct slope, thin set and tile height.
- Install waterproof membrane. An approved membrane, such as (Chloraloy 240®) is required. Cut membrane to reveal drain bolt heads and outlet.
- Install clamping flange
- Lubricate JACLO channel drain outlet with a liquid soap and press into sub drain seal to correct height and position
- Adjust legs to desired height and tighten wing nuts
- Install suitable tile base on top of the membrane mortar, backer board, etc. There are many options at this juncture, follow local codes and tile base manufacturers recommendations. Allow for correct slope, thin set and tile height.
- Tile height + thin set mortar height must equal 1/2". This is the fixed rim height above the tile flange. Adjust thin set amount to achieve this dimension.
- Apply thin set mortar, tile leaving a space for the grout line
- Apply grout
- Install channel drain grate