


New zeroEDGE Channel Drain

INSTALLATION INSTRUCTIONS

Figure 1

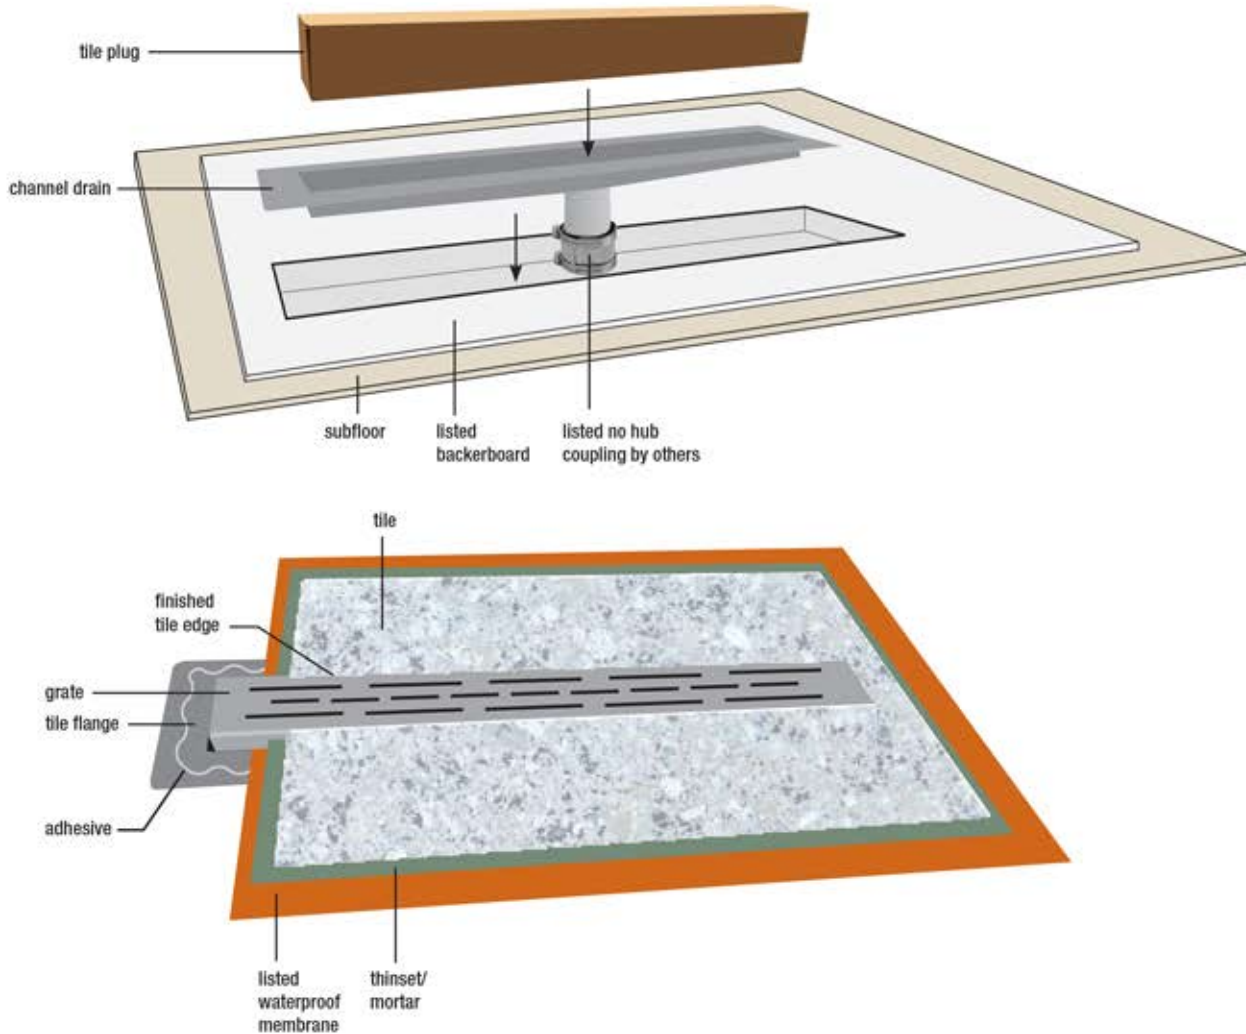

1. Determine location for channel drain
2. Install subfloor and listed backer board adhering to local codes
3. Use cardboard tile plug (supplied with channel drain) as a template & cut hole in floor allowing additional $\frac{1}{4}$ ". Allow access to fit and clamp no hub coupling. *See Fig 1*
4. Install listed no hub coupling onto channel drain
5. Apply a bead of silicone caulking to the underside of tile flange
6. Install channel drain, by attaching no hub coupling to existing piping
7. Place cardboard tile plug into the channel drain
8. Install listed waterproof membrane as per manufacturer's instructions, using the cardboard tile plug as a guide. Adhere
9. membrane to tile flange on channel drain using membrane manufacturers recommended adhesive
9. Using the cardboard tile plug as template, trace and cut your pattern into listed membrane
10. With cardboard tile plug in place in the channel drain, apply thin set mortar and install tile
11. Once above is completed and dry, remove tile plug and install channel drain grate